


SERVICE SPARE PARTS LIST

Accu slagmoersleutel

MODEL NO.

FE IW 18V/T650

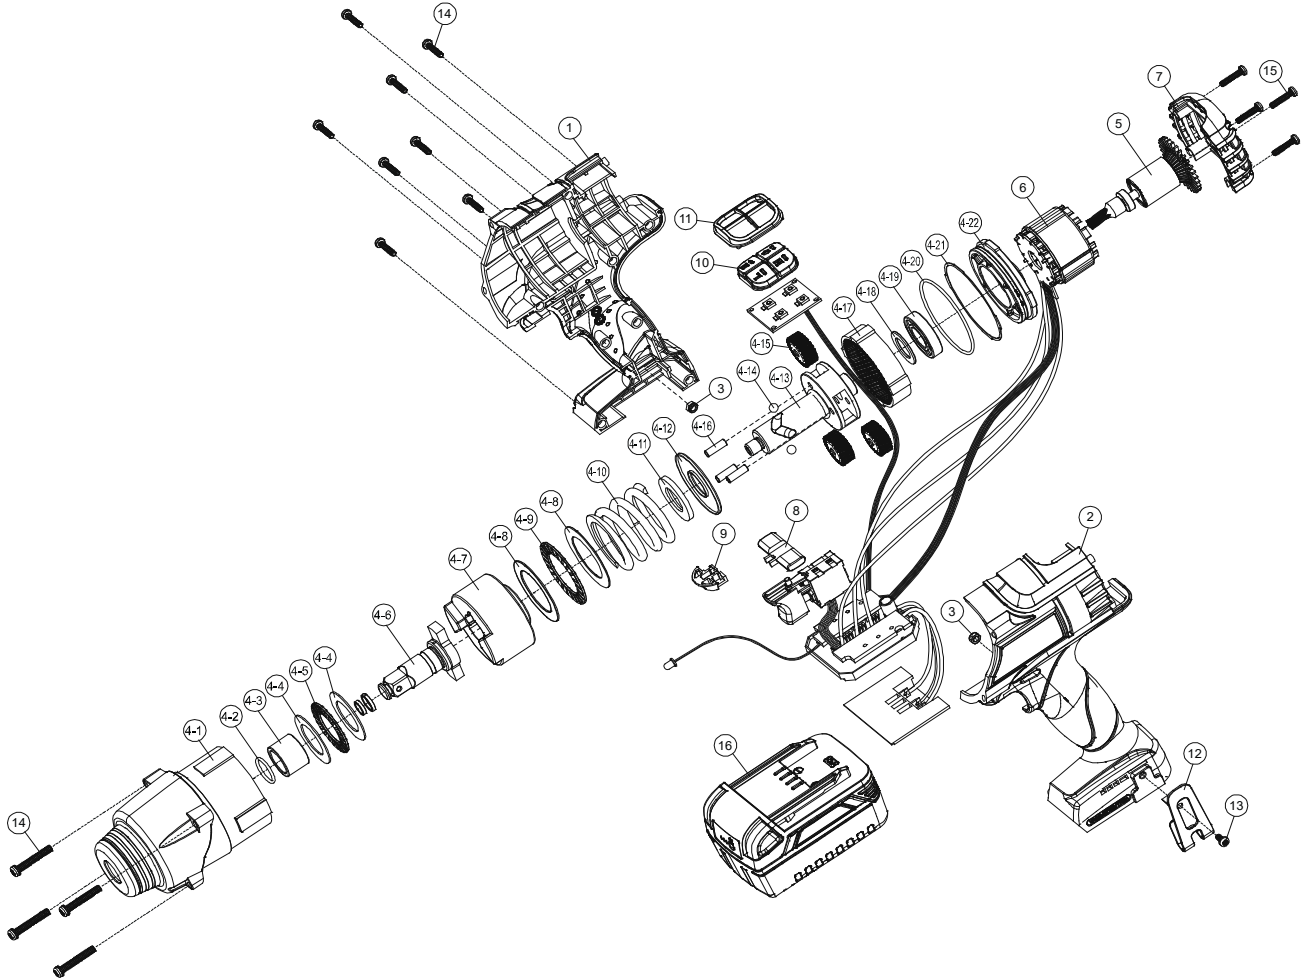

No.	STK CODE	Parts No.	Description	Q	No.	STK CODE	Parts No.	Description	Q
1		6038-795501	HOUSING (R)		4-16		6PC05-16.5	PIN	
2		6038-795502	HOUSING (L)		4-17		6073-793003	REDUCTION GEAR	
3		6NYZ-04	NUT		4-18		6014-680703	WASHER	
4		6228-795501	GEAR BOX ASS'Y		4-19		6DB-1600301	BEARING	
4-1		6217-793001	GEAR CASE		4-20		6076-793004	O RING	
4-2		6076-793001	O RING		4-21		6014-793005	OIL GASKET	
4-3		6148-793001	BUSHING		4-22		6217-795501	GEAR BOX COVER	
4-4		6014-793001	WASHER		5		6228-795502	ARMATURE ASSY	
4-5		6155-793001	THRUST BEARING		6		6228-795503	MOTOR CONTROLLER ASS'Y	
4-6		6127-793001	MIDDLE SHAFT ASS'Y		7		6003-795501	REAR COVER	
4-7		6241-793001	IMPACT BLOCK		8		6056-792301	R/L KNOB	
4-8		6014-793002	WASHER		9		6101-795501	LED COVER	
4-9		6155-793002	THRUST BEARING		10		6056-795501	BUTTON	
4-10		6024-793001	SPRING		11		6072-795501	CONTROL PANEL	
4-11		6131-793001	THRUST PLATE		12		6023-794001	BELT HOOK	
4-12		6014-793003	WASHER		13		6SDAB-04-08	SCREW	
4-13		6110-793001	SHAFT		14		6SDABB04-18	SCREW	
4-14		6180-822001	STEEL BALL		15		6SQEBB05-30	SCREW	
4-15		6073-793002	PLATE GEAR		16		6228-B18B06-T	4.0Ah BATTERY PACK	